

Infrared Remote Control – for Olympus

To use the PROMASTER Infrared Remote Control for Olympus

1. Before using the remote for the first time, remove the plastic separator from the battery holder.
2. Mount the camera on a tripod (recommended) or place the camera on a stable, level surface.
3. Press the center “S” button on the remote and rotate the main command dial on your camera until (delayed remote) or (quick response remote) is displayed in the control panel. ¹
4. Aim the transmitter on the remote control at the infrared receiver on the camera (usually within +/- 40 degrees of the lens axis, from left to right and top to bottom) and press the shutter-release button on the remote control. When using the remote outdoors, make sure that the subject is not backlit and that the line of site between the transmitter and the infrared receiver is not blocked by the lens or other obstacles.
5. How the camera focuses and shoots depends on the options you have selected on your camera. For further information, check your camera's manual.
6. Infrared cannot be seen by human eyes so you will see no visible light from the LED on the front of the remote control during operation.



● Identifying the buttons

 
S	Camera shutter release
T	Operates telephoto function
W	Operates wide angle function
▲	Move forward (replay mode)
▼	Move Backward (replay mode)

● Specifications

- 100% compatible with Olympus RM-1 Remote
- Easy-to-replace CR2025 lithium battery
- Operating temperature: 5 °C to 40 °C (40 °F to 105 °F)
- Typical Battery Life: up to 3 years, 20,000 exposures.
- Operation distance: 1cm – 20meters

¹ For further information, check your camera's manual.

● **To Replace the Battery**

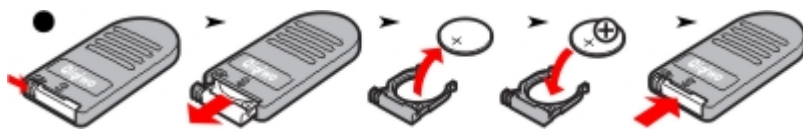

1. The remote control is powered by a three-volt CR2025 lithium battery which is included.
2. After sliding the latch in the direction shown, remove the battery holder.
3. Remove the battery from the battery holder.
4. Insert a fresh battery with the face marked "+" on top.
5. Slide the battery holder into the remote until the latch clicks into place.

Care and Storage

1. When the remote control is not in use for an extend period of time, please remove the battery from the remote control.
2. Do not expose the remote control to excessive heat or humidity.
3. Do not leave the remote control on or near a television, refrigerator, or other appliance with a magnetic field.
4. If the remote control gets wet, wipe it with a dry towel as soon as possible.
5. Do not use organic solvents, such as alcohol or paint thinner, when cleaning the remote control.

Compatible with Olympus cameras

Digital SLR	E1	E3	E10	E20
	E100 RS	E300	E330	E400
	E410	E510	E420	E520
Design & Performance	Stylus 800	Stylus 500	Stylus 410	Stylus 400
	Stylus 300			
Easy & Fun	D40 ZOOM			
Power & Versatility	C8080 Wide Zoom	C770 Ultra Zoom	C755 Ultra Zoom	C750 Ultra Zoom
	C730 Ultra Zoom	C7070 Wide Zoom	C7000 Ultra Zoom	C60 Zoom
	C5060 Wide Zoom	C5050 Zoom	C5000 Zoom	C50 Zoom
	C4040 Zoom	C3040 Wide Zoom	C3030 Zoom	C3000 Zoom
	C2500L	C2100 Ultra Zoom	C2040 Zoom	C2020 Zoom
	C2000 Zoom			
Stylish	μ800 Digital	μ500 Digital	μ410 Digital	μ400 Digital
	μ300 Digital			

Code 1376

LIMITED WARRANTY

This product carries a one-year limited warranty from the date of purchase against defects in materials and workmanship. This warranty does not cover damage resulting from accidents, misuse, unauthorized repair/alterations to the product or failure to follow operating instructions. If the product should become defective within the warranty period and under the above mentioned conditions, please return it to the store you originally purchased it from with proof of purchase, for repair or replacement free of charge.



PHOTOGRAPHIC RESEARCH ORGANIZATION, INC.
FAIRFIELD, CT 06825

www.promaster.com

PROMASTER is a supplier of premium quality lenses, digital camera memory, batteries and accessories, binoculars, filters, digital and conventional electronic flashes, camera cases and tripods.