

Modular Remote Cable Shutter Release

Congratulations on your purchase of a **ProMaster Modular Remote Cable Shutter Release**.



Package contents:

- Remote switch
- Camera connection cable
- Extension cable

OPERATING INSTRUCTIONS

The **ProMaster Modular Remote Cable Shutter Release** is a remote triggering device designed for most DSLR and SLR cameras which have a remote socket in the camera body. It consists of a REMOTE SWITCH, CAMERA CONNECTION CABLE and an EXTENSION CABLE.

PREPARING YOUR REMOTE FOR USE

Plug the CAMERA CONNECTION CABLE into the REMOTE SWITCH. If you need to work at distances further than the camera connection cable allows, first plug the CAMERA CONNECTION CABLE into the EXTENSION CABLE, and then plug the EXTENSION CABLE into the REMOTE SWITCH.

ATTACHING THE REMOTE TO YOUR CAMERA

Plug the camera connector into the remote release socket on your camera BEFORE turning on the power for your camera. Once you have the REMOTE SWITCH RELEASE plugged into your camera, you may turn the power to your camera on.

USING THE REMOTE

Focusing – Partially press the trigger button on the REMOTE SHUTTER RELEASE to activate the focusing and metering systems in your camera.

Taking Pictures – Press the trigger button on the REMOTE SHUTTER RELEASE firmly to activate the shutter on your camera and take a picture. If you have set the self-timer function on your camera, firmly press the trigger button to activate the self-timer.

Long Exposures – To take a timed exposure, set your camera to the bulb "B" mode. Press the trigger button on the REMOTE SHUTTER RELEASE firmly and slide it upward. The red indicator on the remote switch will be revealed and your shutter will be locked to the OPEN position. To close, slide the trigger button on the Remote Shutter Release downward.

ONE YEAR UNCONDITIONAL GUARANTEE

If for any reason, your ProMaster product fails within ONE YEAR of the date of purchase, return the product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation and repair.

www.promaster.com Fairfield, CT 06825