

# Infinity Spotting Scope

## Instructions

- A. Pedestal of tripod
- B. Objective lens cover
- C. Shade hood
- D. Focus wheel
- E. Zoom adjustment ring



1. Mount your PROMASTER spotting scope on a sturdy PROMASTER tripod (sold separately) using the tripod mounting pedestal (A).
2. View the desired object through the eyepiece and rotate the focus wheel (D) until the desired subject is sharp.
3. Zoom in or zoom out by rotating the zoom adjustment ring (E). Once you have set the desired magnification by zooming, it may be necessary to refocus.

## Instructions for Care

Your PROMASTER spotting scope will provide years of trouble-free service if it receives the normal care you would give any fine optical instrument. Non-waterproof models should not be exposed to excessive moisture.

1. Avoid banging and dropping your spotting scope.
2. Store in a cool, dry place.

## Cleaning

1. Blow away any dust or debris on the lens (or use a PROMASTER lens pen).
2. To remove dirt or fingerprints, clean with a “microfiber” cleaning cloth like the PROMASTER SoftClean or MicroClean soft cleaning cloth. Rub lightly in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and eventually cause permanent damage.
3. For a more thorough cleaning, photographic type lens cleaning fluid like PROMASTER OpticClean may be used. Always apply the fluid to the cleaning cloth. Never apply fluid directly on the lens.

**CAUTION: Do not view the sun with this product or with the naked eye. Viewing the sun can cause permanent eye damage.**



PHOTOGRAPHIC RESEARCH ORGANIZATION, INC.  
FAIRFIELD, CT 06825

[www.promaster.com](http://www.promaster.com)

PROMASTER is a supplier of premium quality lenses,  
digital camera memory, batteries and accessories, binoculars, filters,  
digital and conventional electronic flashes, camera cases and tripods.

Code 6972