

160mm


FOLD  
VERTICALLY

## One Year Unconditional Warranty

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If, at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.



# [ Mobile Lens 2.0 ]

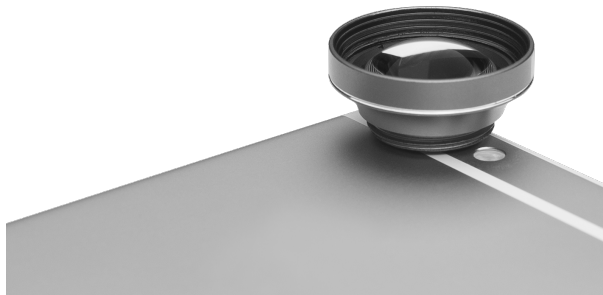

Made in China

[WWW.PROMASTER.COM](http://WWW.PROMASTER.COM) | FAIRFIELD, CT 06825

FOLD  
HORIZONTALLY

180mm

Congratulations on your purchase of this ProMaster Mobile Lens. It will enhance your picture taking experience by giving your phone or tablet a fun, new perspective. Every ProMaster mobile lens and mobile filter uses a dual mounting system. This means you can mount the lens to your mobile device in one of two ways: magnetically or with the included clip mount.

### Mounting Magnetically

1 Locate the adhesive backed magnetic phone ring (included).

2 Feel the backing off the ring to expose the adhesive.

3 Center the ring around your mobile device's camera lens.

4 Press to adhere the ring to the device.

5 Connect a mobile lens / filter to a magnetic lens mounting ring by rotating the lens clockwise into the threads of the ring.

6 Place the mobile lens with attached magnetic ring over the adhesive ring on your device and it will magnetically attach itself.

7 Remove the lens by simply pulling it away.

### Attaching with Clip Mount

1 Locate the spring-loaded clip mount (included). Center a mobile lens over the mounting hole in the clip mount.

2 Attach the lens to the clip mount by rotating clockwise until secure.

3 Center the mobile lens over the camera lens on your device.

4 Squeeze the ends of the clip mount together to open its jaw.

5 Gently release the ends of the clip mount to close its jaws and hold the lens in place with pressure.