



LED Light Panel

LED120

Thank you for purchasing the PROMASTER® LED120 Light Panel.

Please read the following instructions to ensure the best operation of your light panel.



Installing the Batteries

Remove the battery cover from the back of the light by gently squeezing the two battery door locking tabs.

Insert 4 AA batteries (not included) as shown. Be sure the batteries are inserted with the correct polarity (+,-) as shown in the battery compartment.



After the batteries are properly installed use the power switch to turn your light panel on or off.

Installing or Removing the Color Correction Filter

Your LED120 light is supplied with a 3300K correction filter that helps give you the best color balance when shooting under ambient tungsten lighting. This filter is easily installed by snapping over the edge of your LED120 light. To remove, simply lift the filter off.



Using the Camera Bracket



Attach the mounting screw **(A)** to the tripod mount of your camcorder/camera. Slide your light into the shoe **(B)** of the mounting bracket.

Specifications

Light source:	120-5mm super bright LED lamps
Beam angle:	60°
Luminance:	51 Lux @ 10'
Color rendering index:	≥85
Color temperature:	5600K
LED longevity:	>10000h
Power input:	AA Battery × 4
Housing size(mm):	94 x 93 x 38
Weight(g):	140

Code 7200
Made in China

www.promaster.com

Fairfield, CT 06611