

*Infrared Remote*  
**[Shutter Release]**

For use with **CANON, NIKON, OLYMPUS, PENTAX, SAMSUNG AND SONY** cameras.

## OPERATING INSTRUCTIONS

### IMPORTANT NOTICE

Your ProMaster Remote Control features a POWER SAVE mode. Please observe the following to ensure proper operation:

1. After initially installing the battery or changing the battery, press and hold the shutter release button for at least 2 seconds to activate the remote.
2. The remote will enter the POWER SAVE mode after 8 minutes of inactivity. To wake the remote from the POWER SAVE mode and activate it for use, press and hold the shutter release button for at least 2 seconds.

### Identifying the buttons

1. C1, C2 buttons for Canon EOS series cameras
2. A button for SAMSUNG PointShot cameras
3. P button for Pentax K series and Samsung GX series cameras
4. O button for Olympus E system cameras
5. N button for Nikon D series cameras
6. S1, S2 button for SONY Alpha and Nex series cameras



Button	Funtion
<b>C1</b>	Instant shutter for Canon
<b>C2</b>	Delay shutter for Canon
<b>A</b>	Instant shutter for Samsung
<b>P</b>	Instant shutter for Pentax and Samsung
<b>O</b>	Instant shutter for Olympus
<b>N</b>	Instant shutter for Nikon
<b>S1</b>	Instant shutter for Sony
<b>S2</b>	Delay shutter for Sony

## To use the ProMaster Universal Infrared Remote Control

1. Before using the remote for the first time, install the CR2032 battery (included).
2. Mount the camera on a tripod (recommended) or place the camera on a stable, level surface.
3. Set your camera for delayed remote or quick response remote per the instructions provided with your camera.
4. Aim the remote control at the infrared receiver on the camera (usually within +/- 20 degree of the lens axis, from the left to the right and from the top to the bottom) and press the shutter-release button on the remote control. When using the remote outdoors, make sure that the subject is not backlit and that the line of site between the transmitter and the infrared receiver is not blocked by the lens or other obstacles.
5. How the camera focuses and shoots depends upon the options selected for your camera. For further information, check your camera's instruction manual.
6. Infrared cannot be seen by human eyes so you will see no visible light from the LED on the front of the remote control during operation.

## To Replace the Battery



1. The remote control is powered by a three-volt CR2032 lithium battery which is included.
2. After sliding the latch in the direction shown, remove the battery holder.
3. Remove the battery from the battery holder.
4. Insert a fresh battery with the face marked "+" on top.
5. Slide the battery holder into the remote until the latch clicks into place.

## Specifications

- Easy-to-replace CR2032 lithium battery.
- Operating temperature: 5°C to 40°C (40 °F to 105 °F).
- Typical Battery Life: up to 3 years, 20,000 exposures.

## Care and Storage

1. When the remote control is not in use for an extended period of time, please remove the battery from the remote control.
2. Do not expose the remote control to excessive heat or humidity.
3. Do not leave the remote control on or near a television, refrigerator, or other appliance with a magnetic field.
4. If the remote control gets wet, wipe it with a dry towel as soon as possible.
5. Do not use organic solvents, such as alcohol or paint thinner when cleaning the remote control.

**C1, C2 buttons for Canon EOS series cameras**

EOS 300D	EOS 350D	EOS 400D	EOS 450D
EOS 550D	EOS 600D	EOS 60D	EOS 7D
EOS 500D	EOS 5D Mark II	EOS Rebel T1i	EOS Rebel T3i
EOS Rebel XSi	Digital Rebel T1	EOS Digital Rebel	EOS Rebel T2i
EOS Rebel T2	Digital Rebel XT	Digital Rebel XTi	

**A button for SAMSUNG PointShot cameras**

NV10	NV11	NV15	NV20	NV30	NV40
NV100HD	NV24HD	NV7 OPS	NV8	WB500	WB550
EX1	TL500				

**P button for Pentax K series and Samsung GX series cameras**

<b>Pentax K series</b>					
Kx	Kr	K7	K5	645D	K110D
K100D	K10D	K100 Supper	K200D	K20D	*ist D
*ist DS2	*ist DL2	*ist DL	*ist DS		
<b>Pentax Optio series</b>					
WG-1	W90	i10	S1	S	S5n
	S4	S4i	S5i	S6	S7
430	450	550	750z	S50	S40
SV	330	A10	A20	A30	
<b>SAMSUNG GX series</b>					
GX-1L	GX-1S	GX-10	GX-20		

**O button for Olympus E system cameras**

E5	E3	E1	E30	E10	E20
E100 RS	E300	E330	E400	E410	E450
E510	E520	E620	E600	E-P1	E-P2

**N button for Nikon D series cameras**

D40	D40x	D50	D60	D70	D70s
D80	D90	D3000	D5000	D5100	D7000

**S1, S2 button for SONY Alpha and Nex series cameras**

A230	A330	A380	A500	A550	A700
A850	A900	NEX 5	A290	A450	A390
A560	A580	A33	A55		

**ONE YEAR UNCONDITIONAL GUARANTEE**

If for any reason, your ProMaster product fails within ONE YEAR of the date of purchase, return the product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation and repair.

**Code 7613**

[www.promaster.com](http://www.promaster.com)

**Fairfield, CT 06825**