


Super Slim Rechargeable

LED Light

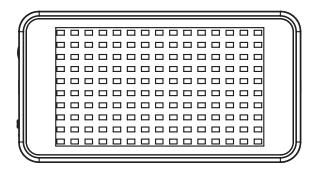


Thank you for your purchase of the PROMASTER LED120SS SUPER SLIM RECHARGEABLE LED LIGHT.

The PROMASTER LED120SS SUPER SLIM RECHARGEABLE LED LIGHT will help you get awesome pictures and video. With 120 ultra bright daylight balanced LEDs, the LED120SS gives you perfect light when and where you need it.

The super slim design is about one half the size of other lights with this type of output and is a perfect match for mirrorless and smaller DLSR cameras. The built-in rechargeable battery allows for up to 2 hours of full power runtime.

PARTS IDENTIFICATION

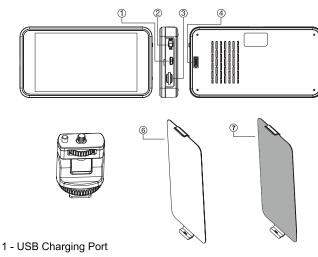

- 2 Power Switch
- 3 Brightness Control Knob
- 4 Battery Charge Indicator
- 5 Hot Shoe Mounting Bracket
- 6 Clear Diffuser Panel
- 7 3200° K Color Panel
- 8 5V/1A USB Charger
- 9 Micro USB Charging Cable





GETTING STARTED

Before using your light, be sure that the light is fully charged. Plug the Micro USB Charging Cable (9) into the USB Charging Port (1) of the light. Plug the other end of the cable into the Charger (8) and plug the charger into an A/C outlet. The lights on the Battery Charge Indicator (4) will begin to flash, indicating the level of charge in the battery. When all of the LEDs glow solid, the battery is fully charged. (NOTE: Fully charging the battery may take 4 to 6 hours.) Once the battery is charged, your light is ready for use.

USING THE LIGHT

To use the light, mount it on a bracket, arm, or the included Hot Shoe Mounting Bracket (5) using the 1/4 - 20 thread in the base of the light.

Turn the light on using the Power Switch (2).



Adjust to the desired brightness using the Brightness Control Knob (3).



For a softer light, clip the Clear Diffuser Panel (6) to the front of the light. When shooting indoors with primarily tungsten ambient light, using the 3200°K Color Panel (7) will help give the light a color closer to the ambient light.

As the battery becomes depleted, the LED Indicator Lights will go out one by one. When the last LED is blinking, the power is low and the light will turn itself off. Please recharge the battery.

IMPORTANT NOTES

- To prevent the risk of electrical shock, do not operate the light in rain or allow the light to get wet.
- There are no user servicable parts in the light. Opening the light could cause serious physical injury. If your light requires service, return it to your dealer or a qualified repair shop for service
- It is normal for the light to get warm during charging and operation. Take care
 not to block the ventilation holes on the case.
- After use, do not immediately store the light while it is warm to the touch.
 Doing so could cause fire or other damage to the light.
- Do not look directly into the light when it is in operation. Doing so could cause damage to your eyesight.
- Do not dispose of the light in fire or heat. This could cause explosion or other serious injury.

SPECIFICATIONS

+ 120 High Brightness LED Lights

+ Light Output: 1150 Lux @ .5M

+ Power Consumption: 11 watts

+ Color Temperature: 5800° K ± 200° K / 3200° K with panel

+ Battery: 3.7V/4200mAh Lithium Polymer Battery

+ Charging: DC 5V/1A Micro USB Port

+ Dimensions: $5 \frac{1}{2} \times 27/8 \times \frac{3}{4}$ " / $14 \times 7.3 \times 1.9$ cm

+ Weight: 6.4 oz / 181 g

Includes: Light, 5V/1A Charger, USB Charging Cable, Camera mount, 3200° K and Diffusion filters

ONE YEAR UNCONDITIONAL GUARANTEE

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge.

ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.

Code 8289

www.promaster.com Fairfield, CT

