

## Recommended Printer Settings for Consumer Desktop Printers

Achieving the optimum settings for any inkjet printer is a painstaking process and is affected by not only the type of paper but the generation of ink, condition of the printheads and calibration of your monitor. Professional “PROFILES” are available for high end professional inkjet printers, unfortunately with the hundreds of consumer inkjet printers on the market and the wide variations of implementations it is impossible to give a specific precise group of settings for every printer.

Following are starting suggestions for consumer desktop inkjet printers with PROMASTER Photolmage papers. In most cases, these general settings will yield excellent results. For those that want to try to achieve a more precise calculation, these settings provide the optimum starting point.

### Photolmage PRO Heavyweight Glossy, Matte, & Pearl Photolmage Album Dual Sided Semi-Gloss

<u>Printer</u>	<u>Paper Type</u>	<u>Print Quality</u>	<u>Other recommended settings</u>
HP	HP Premium Photo Paper	Best	PhotoREt
Epson	Photo Quality Glossy Paper	Quality	Error Diffusion, High speed off, Photo Enhance
Canon	Glossy Photo Paper	High	Automatic

### Photolmage Artiste Fine Art & Canvas Photolmage Album Bright White & Watercolor

<u>Printer</u>	<u>Paper Type</u>	<u>Print Quality</u>	<u>Other recommended settings</u>
HP	HP Premium Ink Jet Paper	Best	PhotoREt
Epson	Matte Paper HeavyWeight	Quality	Error Diffusion, High speed off, Photo Enhance
Canon	High Resolution Paper	High	Automatic

Depending on the version of the printer driver, some of the above terms and settings may be different. Usually, only “Paper Type” and “Print Quality” need to be selected to obtain high quality prints. “Other recommended settings” is recommended for better print images, however some may require more memory and longer print time.

**For more information about PROMASTER products,  
visit our website at [www.promaster.com](http://www.promaster.com)**