

[pro]master®

PRM [Remote Control Studio Monolight]





PROMASTER PRM SERIES REMOTE MONOLIGHTS are full-featured high power studio monolights with a full function remote control that offers you the ultimate convenience of controlling all of the flash functions from your camera or worktable. The sixteen channel remote allows you to control flashes individually or in groups giving you the ultimate control of your lighting creativity.

Features

- + 2.4GHZ full function remote control with LCD screen
- + 16 channel operation for individual or group control
- + Remote stores up to 16 different light configurations
- + Advanced IGBT flash circuitry for fast recycling and precise control of flash output
- + Remote operation up to 328'/100m
- + Fan cooled for longer component life
- + Dual receiver sensors for added sensitivity


Light Parts Identification

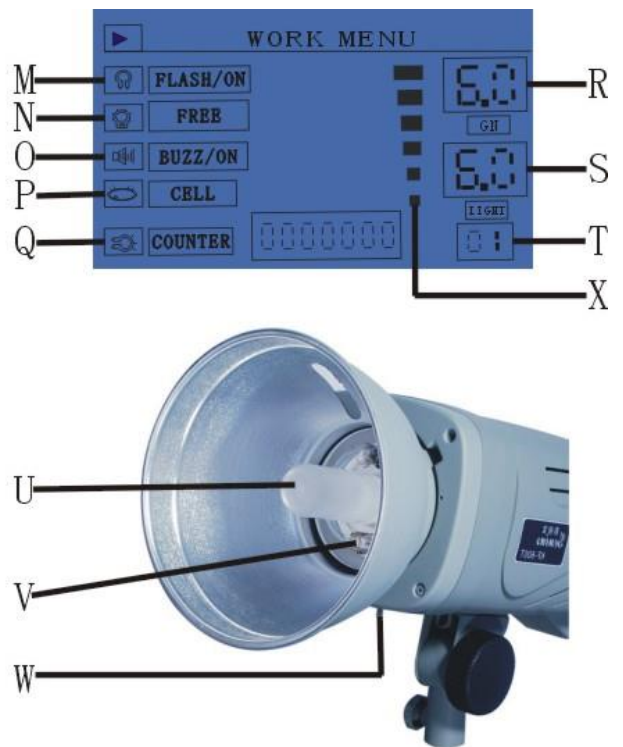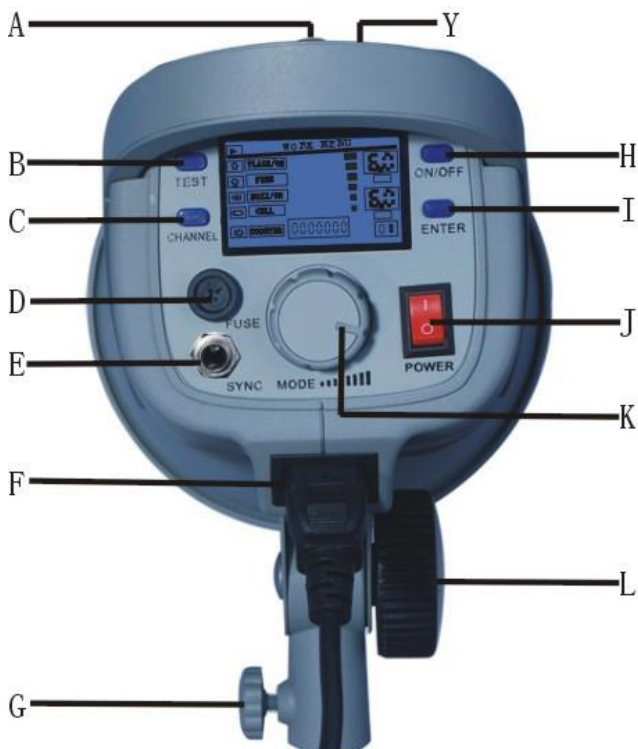

- | | |
|--|--|
| A. Optical slave receiver | N. Modeling lamp mode selection |
| B. Flash test button | O. Buzzer mode selection |
| C. Channel selection button | P. Optical slave mode selection |
| D. Fuse compartment | Q. Flash counter |
| E. Sync cord jack | R. Flash output power display |
| F. AC input socket | S. Modeling light output display |
| G. Stand lock knob | T. Channel Display |
| H. Remote power button | U. Modeling light |
| I. Horizontal menu select button | V. Flash tube |
| J. Master power switch | W. Accessory mount release lever |
| K. Vertical select / power adjustment dial | X. Charging display bar |
| L. Angle adjustment locking knob | Y. Flash Indicator/Power Indicator (not shown) |
| M. Flash mode selection | |

NOTICE: Diagram above is shown with **OPTIONAL** standard reflector installed. Reflectors and other accessories are available for separate purchase.

Remote Control Function Identification

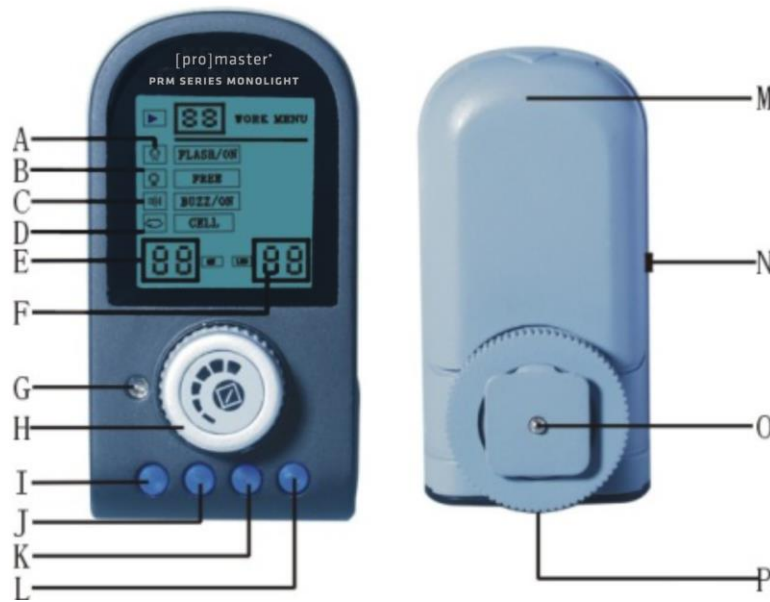

- | | |
|---|---------------------------------------|
| A. Flash mode selection | I. Power/Remote light power switch |
| B. Modeling lamp mode selection | J. Channel selection key |
| C. Buzzer mode selection | K. Test flash button |
| D. Optical slave mode selection | L. Horizontal menu select button (OK) |
| E. Flash output power display | M. Battery cover |
| F. Modeling light output display | N. X synchronization line jack |
| G. Signal Indicator | O. Hot shoe contact |
| H. Vertical select / function adjustment dial | P. Shoe locking ring |

Using the remote control

1. Open the battery cover (M) and install two AAA batteries. Be sure to insert them with the positive and negative facing the direction of the diagram in the remote housing.
2. Power on the remote using the power button (I). Be sure that the remote is set to the same channel as the light you wish to control. Note, if the remote is set to a different channel, after you have set the light to the matching channel, pressing any remote key will wake the light you are controlling.
3. Insert the shoe of the remote control into the hot shoe on your camera. If the camera does not have a hot shoe, you will need to connect the remote to the camera using the X-sync cord. Plug the cord into the X-sync jack (N) of the remote and the other end into the camera's X-sync port. Press the shutter button to test the flash. Note: The flash must be set to the CELL + FM, CELL +1, or CELL +2 setting.
4. To make flash settings, press the Mode Dial (H) until the setting you wish to change flashes. Use the OK button to toggle through the options until the option you wish to choose flashes. Press the Mode Dial (H) to select and store the setting. Note that you will have approximately 5 seconds to activate your choice. After that time, the selection will return to the previous state.
5. After approximately 2 minutes of inactivity, the remote will go to sleep to conserve power. Pressing the power button (I) will reactivate the remote.

Using the Monolight

1. Plug the power cord into the AC input socket (F) of the light. Turn on the main power switch (J). The power indicator (Y) will blink indicating the light is in the standby mode. Pressing the remote power button (H) on the light or the power button on the remote (I) will activate the lights operational mode.

2. Adjust flash power to the desired level using the Mode dial on the flash or remote. The flash output power indicator has a range of 2.0 - 6.0 where 2.0 represents the minimum power and 6.0 represents the maximum power. To increase the power, rotate the **MODE** dial clockwise. To reduce the power, rotate the **MODE** dial counter clockwise.
3. To adjust the menu functions, press the **MODE** dial until the function you wish to adjust is blinking. When the light is in this mode you will not be able to adjust the power until the menu function key stops blinking.
4. The output of the modeling light can be set in 3 ways. A) Proportional to the output of the flash. (Mode Prop) In this case, as you adjust the power of the flash, the output of the modeling light will be adjusted at the same time. B) Independently from the output of the flash. (Mode Free). In the independent mode, the output of the modeling lamp can be set separately from the output of the flash. To adjust the output of the modeling light press the Enter (I) button on the light or the OK (L) button on the remote. Adjust output to the desired level using the Mode dial on the light or remote. The output power indicator has a range of 2.0 - 6.0 where 2.0 represents the minimum power and 6.0 represents the maximum power. To increase the power, rotate the **MODE** dial clockwise. To reduce the power, rotate the **MODE** dial counter clockwise.

Flash Mode Options

Flash On/Off: You can turn the operation of the flash tube on or off. Press the **MODE** dial until the **FLASH/ON** is flashing. Press the Enter/OK key until the desired option is flashing. Press the **MODE** dial to store the setting. In the FLASH ON mode, the flash tube is active and all of the functions of the light are working. In the FLASH OFF mode, only the modeling light is active.

Modeling Light: The Modeling Light has 3 options. A) Proportional to the output of the flash. (Mode Prop) In this case, as you adjust the power of the flash, the output of the modeling light will be adjusted at the same time. Note, if the flash tube is in the FLASH OFF mode, this option is not available. B) Independently from the output of the flash. (Mode Free). In the independent mode, the output of the modeling lamp can be set separately from the output of the flash or C) OFF. Press the **MODE** dial until the **FREE PROP OFF** is flashing. Press the Enter/OK key until the desired option is flashing. Press the **MODE** dial to store the setting. In the PROP mode, the modeling light output will be adjusted in sync with the flash output. In the FREE mode, the modeling light can be adjusted independently of the flash output. In the OFF mode, the modeling light is turned off.

Buzzer: The audible signals from the light may be turned off or on in the BUZZ mode. Press the **MODE** dial until the **BUZZ/ON** is flashing. Press the Enter/OK key until the desired option is flashing. Press the **MODE** dial to store the setting. In the BUZZ ON mode the light will give an audible signal any time a key on the light or remote is pressed or when the flash is triggered. In the BUZZ OFF mode there will be no audible signals.

Optical Flash Sync, Anti Pre-Flash and Red-Eye Reduction function: In addition to the wireless remote, the flash may be triggered by the light from another flash using the light's built-in photosensitive sensor. This option has 4 modes. In the **CELL** mode, the optical sensor is disabled and the flash can be triggered by the wireless remote, test button or sync cord. In the **CELL FM**, the optical sensor is on and the flash can be triggered by either the wireless remote, another flash, the test button, or a sync cord. Some cameras emit a pre-flash to aid in focusing and red-eye reduction which can cause the flash to fire out of sync with the camera. It is always best to turn off the pre-flash function in your camera. If this is not possible, setting the light to the **CELL 1** mode will cause the optical sensor to ignore the pre-flash from the camera and fire on the second flash. Be sure to note that different cameras use different pre-flash schemes so the **CELL 1** mode may not be effective for your camera. Selecting the **CELL 2** mode activates the red-eye reduction mode of this light. In this mode, the flash will fire 15 times in fast succession helping to reduce the red-eye effect in certain situations. To select the mode of your choice, press the **MODE** dial until the **CELL FM 1 2** is flashing. Press the Enter/OK key until the desired option is flashing. Press the **MODE** dial to store the setting.

Specifications

- + Output Power: PRM-600 – 600ws / PRM-1000 – 1000ws
- + Output Adjustment: Continuous stepless adjustment with output scale of 2.0 – 6.0
- + Recycle Time: 1 – 2 seconds
- + Color Temperature: 5500° ± 200° K
- + Modeling Light: 150 watts
- + Flash Trigger Modes: 2.4GHZ wireless, photo cell, wired flash cord, test button
- + Built-in cooling fan
- + Operating Voltage: AC110V
- + Flash Duration: 1/800 – 1/1500 second
- + Maximum Remote Distance: 328'/100m

Optional Accessories

- + 7" 95° Standard Reflector, 9" 140° Wide Angle Reflector, 16" Beauty Dish, Barn Door Set, Snoot, Soft Boxes

Important Notes

1. Be sure to use the correct modeling lamp bulb. Using a lamp with greater than 150 watts may cause damage to the light circuitry.
2. Storage for long periods may cause the capacitor in the light to deteriorate. It is recommended that the light be fired several times each month to exercise the capacitor and keep the light in good working order.
3. Be sure the light is properly grounded. Using the light with an ungrounded power source or in wet or poorly ventilated areas can cause damage or injury.
4. There are NO USER SERVICABLE PARTS inside of this light. Opening the housing can lead to serious injury or damage.
5. Do not touch or look directly into the lamp. This could result in injury to your person or eyesight.
6. Your light may have several hundred of activations on the counter when you first open the package. This is NORMAL and occurs during the testing and QC process. These activations have no impact on the useful life of your unit but are needed to insure that all of the functions of your light work properly and reliably.

Made in China

Keep in Touch

For more information, tutorials, industry news and tips & tricks, make sure to visit us at promaster.com, follow our feeds on Twitter @promasterphoto, and subscribe to our YouTube ProMasterChannel.

ONE YEAR UNCONDITIONAL GUARANTEE

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.

www.promaster.com | Fairfield, CT 06825