

CMOS/CCD Sensor Cleaning Kit

The PROMASTER CMOS/CCD Sensor Cleaning Kit is designed to remove dust build up caused by static electricity using our specially designed soft tip polyurethane tools.

INSTRUCTONS:

1. Blow the dust from around the camera lens mount.
2. Using the tip, (A) or (B), gently remove dust particles by touching the tip of the tool to the dust particle on the sensor.
3. Once you have picked up the dust particle, press the tip of the tool onto the mini mat, transferring the dust to the mini mat.
4. After use, rinse the tool tips and mini mat in water to remove any dust. Allow to air dry. Store the kit in the included storage case. Replace the transparent sheet (included) on the mini mat for optimum protection.



IMPORTANT:

1. For fingerprints or other oil based marks contact the camera service center for assistance. This product is only intended for removal of loose particle matter.
2. Chemicals, alcohol and other abrasive substances will damage the product and should NOT be used on the tool tips.
3. Avoid applying excessive pressure to the tip when using this product, as it may result in damage to the CMOS/CCD Sensor.
4. The manufacturer is not responsible for any damage which may occur through the use of this product. Any warranty, either express or implied, is strictly limited to replacement of this product if, in the sole opinion of PROMASTER, it is found to be defective in manufacturing.



PHOTOGRAPHIC RESEARCH ORGANIZATION, INC.
FAIRFIELD, CT 06825

www.promaster.com

PROMASTER is a supplier of premium quality lenses, digital camera memory, batteries and accessories, binoculars, filters, digital and conventional electronic flashes, camera cases and tripods.