



PROMASTER®

TRAVELER Charger

PLEASE READ THE INFORMATION AND FOLLOW ALL INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT.

IMPORTANT WARNING:

This CHARGER is for charging **rechargeable Li-Ion batteries ONLY!** Inserting any other batteries may damage the device, destroy the batteries and/or cause injury to the user.

CAUTIONS:

- Always unplug the charger when not in use.
- Always unplug your charger from the power source before cleaning.
- Always replace frayed or damaged wire and broken plugs immediately.
- Do not use, place or store the charger where it may come into contact with water or moisture.
- Do not short-circuit the metal contacts of the battery and charger.
- Do not disassemble, deform or reconstruct any part of the charger.

OPERATING INSTRUCTIONS:

1. Rotate the AC plug of your PROMASTER® Traveler charger until it is fully extended and locked into position. Plug your charger into a household AC outlet. The LED indicator on the front of the charger will turn GREEN to indicate it is powered properly and ready for use.
2. Insert your camera/camcorder battery with the appropriate direction into the charger unit and be sure it is making proper contact with the metal/charging pins for your camera/camcorder battery. The LED indicator built in the charger unit will turn RED to indicate this unit has begun to quick charge your battery.
3. It may be necessary to turn the charger upside down to prevent the battery from falling off the charger when it is plugged into a WALL AC socket.
4. When the battery is charged to approx. 90% of its rated capacity, the LED light on this charger will turn GREEN. The charger is now in the "TRICKLE CHARGING" mode to ensure charging safety. Once the LED has turned GREEN, you may remove your battery from the charger and use it immediately. To obtain a 100% full charge, it is recommended to leave your battery on the charger unit for 30-60 additional minutes after the LED turns GREEN.
5. Due to the advanced charge technology and smart circuitry, it is safe to leave your battery on the charger after it is fully charged HOWEVER to avoid the unnecessary power consumption and prolong the operating life of the charger, it is not recommended to leave the battery in the charger for the extended periods of time.

IMPORTANT NOTES:

1. All batteries will naturally discharge themselves even if they are not in use. To prolong their service life, it is recommended that you do not let a battery sit idle for more than two months without recharging. Also due to the self-discharge, be sure to recharge your batteries before you plan to use them.
2. The batteries, AC adapter and the charger will get warm during the charging cycle. This is normal.
3. Keep the battery terminals clean.
4. Always insert the battery in the charger with the correct polarity.
5. If the charger does not charge the batteries, check to see if the battery is dead, faulty or worn out. All rechargeable batteries will eventually wear out after being used for a certain numbers of cycles.
6. Always keep metal contacts on both charger and battery clean by wiping the surfaces with a dry, soft and clean cloth.
7. Remove your batteries from the device (such as digital camera, PDA...etc which uses these batteries) after use. These devices will continue to drain a small current from your batteries even if they are turned off.
8. For best results, always use PROMASTER® XtraPower batteries.

PROMASTER® One Year LIMITED WARRANTY:

- 1) To claim warranty service, return your product to your Authorized PROMASTER Dealer along with a copy of the original sales receipt from an Authorized PROMASTER dealer bearing the purchaser's name, date of purchase and description of the item being submitted for warranty service. If it is not practical to return it to your Authorized PROMASTER dealer, your product may be returned PREPAID to the PROMASTER WARRANTY CENTER listed below.
- 2) If, in the sole opinion of PROMASTER, this product has become non-functional due to a defect in the workmanship or materials at the original point of manufacturing, PROMASTER will repair or replace (at PROMASTER's option) this product without charge. In the event of replacement, PROMASTER reserves the right to substitute a like reconditioned product with similar characteristics. If not prohibited by local law, a handling fee may apply.

3) This warranty will be considered NULL and VOID in the following cases:

a) Damage to the product due to mishandling, alteration, accident, impact, sand and/or liquid or moisture damage, tampering, battery or chemical corrosion, failure to follow operating, maintenance, or environmental instructions prescribed by the instruction manual, shipping damage, excessive use; or,

b) Damage caused during service performed by anyone other than the authorized PROMASTER service center; or,

c) If the product has had its serial number or other identifying data altered or removed; or

d) Damage, defect, or unsatisfactory performance caused by the use of accessories not manufactured or distributed by PROMASTER; or,

e) The product was not purchased from an Authorized PROMASTER dealer.

4) In no event will PROMASTER be liable for any damage, including any loss of film, other inconvenience, lost profits, lost savings, or other incidental or consequential damages arising out of the use or inability to use this product.

For service, return this product to your nearest PROMASTER Dealer (a listing may be found at www.promaster.com) or pack it carefully as to avoid any damage and return it prepaid to:

PROMASTER WARRANTY CENTER

2950 Turnpike Drive, Section 6 – 9


Hatboro, PA 19040

Be sure to include a copy of your sales receipt which clearly identifies your product, your name, and the date and place of purchase. In addition be sure to include a brief description of the problem you are experiencing with the product.


PROMASTER®

XtraPower Traveler 3

Compatibility Illustration

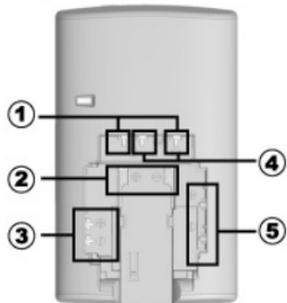

PROMASTER NP-95, EN-EL5
FUJIFILM NP-95
NIKON EN-EL5

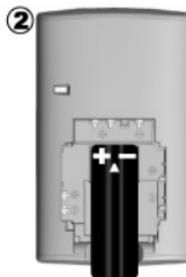

PROMASTER NP-80
FUJIFILM NP-80/100
JVC BN-V712U/V714U
KODAK KLIC-3000
RICOH DB-20/30
TOSHIBA NP-100, PDR-BT1/BT2/BT2A



PROMASTER NB-5L
CANON NB-5L

* Match the + & - symbols

STEP 1.



STEP 2.



STEP 3.



STEP 1 : Check the + & - symbols in the charger slot.

STEP 2 : Check the + & - symbols on the battery.

STEP 3 : Be sure to match the + & - symbols when inserting the battery into the charger for recharging.

* The charger may not work properly if failing to follow the above instructions.



PROMASTER NP 20/60/120,
KLIC-5001
CASIO NP-20/30
FUJIFILM NP-60/120
KODAK KLIC-5000/5001
KYOCERA BP-1500S
OLYMPUS LI-20B
PANASONIC CGA-S301E/S302E
VW-VBA10/VBA21
PENTAX D-Li2/Li7
RICOH DB-40/43
SAMSUNG SBL-1037/1137
SANYO DB-L50
TOSHIBA PDR-BT3



CASIO NP-60
PROMASTER NP-1,
CGA S004, SBL-0837, D-Li8
FUJIFILM NP-40
KODAK KLIC-7003/7005
KONICAMINOLTA NP-1
PANASONIC CGA-S004,
DMW-BCB7
PENTAX D-Li8
SAMSUNG SBL 0737/0837