



# Wireless Remote Shutter Release

Please read these operating instructions carefully before using the **ProMaster Wireless Remote Shutter Release**.

## Package Contains:

- Transmitter x1
- Receiver x1
- CR-2 battery x1
- 23A battery x1
- Connecting cord x1
- English Instruction x1

 Transmitter	 Receiver	 CR-2 Lithium battery
 23A battery	 Connecting cord	 Hot Shoe Converter (For SONY/ MINOLTA model only)

## Parts of Transmitter and Receiver.





**Replacing batteries:**



**Setting the Channel Code:**



The ProMaster Wireless Remote is designed for most of DSLR and SLR cameras that have a remote socket on the camera body. It allows you to easily create compelling close-ups from a safe and secure "line-of-sight" distance of up to 30 meters (99' feet). The receiver simply attaches to a compatible camera's accessory shoe and connects to the camera's remote socket with the supplied receiver cable. The receiver is powered by one CR-2 lithium battery and the transmitter is powered by one 23A battery.

## **Features:**

### *Receiver:*

- Battery Type: 1 x CR-2 lithium battery
- Operating temperature: 5° C to 40° C (40° F to 105° F)
- Net Weight Approximately: 19g
- Dimensions: 47.5 X 38.0 X 21.9mm

### *Transmitter:*

- Battery Type: 1 x 23A battery
- Operating temperature: 5° C to 40° C (40° F to 105° F)
- Net Weight Approximately: 18g
- Dimensions: 81.90 X 27.3 X 14.5mm

## **Operating Instructions:**

1. Turn OFF the power switch on the camera before inserting the connecting cord from the remote into the camera's remote socket.
2. Please make sure the transmitter and receiver are the same code setting.
3. Plug the connecting cord into the receiver remote socket and the camera remote socket.
4. Turn ON the power of the receiver and the camera.
5. Select Instant / Delay / Bulb release modes
  - For delayed release, set the mode switch of the transmitter to 3S. When you press the shutter button, the camera will take a picture after a 3-second delay.
  - For instant release, set the mode switch to 0S. When you press the shutter button, the camera will take a picture instantly.
  - For Bulb mode, set the mode switch to 0S. Press the shutter button of the transmitter for 5 seconds, the receiver will lock the shutter for BULB. To release the shutter lock, press the shutter button of the transmitter again, the receiver will unlock the shutter.
  - To focus, press the shutter button of transmitter half way.

**IMPORTANT NOTE:** *Some camera and lens combinations take longer to achieve focus lock. Your camera may not trigger until focus lock has been achieved. If the remote fails to trigger your camera, it is likely that it is due to the fact that your camera has not achieved focus lock when the trigger signal is received. Switching the remote to the 3S delay mode will give your camera more time to focus and help the remote to trigger your camera reliably.*

## **ONE YEAR UNCONDITIONAL GUARANTEE**

If for any reason, your ProMaster product fails within ONE YEAR of the date of purchase, return the product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation and repair.

Made in China

[www.promaster.com](http://www.promaster.com)

Fairfield, CT 06825