



 
[pro]master®

[Microfilm Screen Protectors]



Step 1)


Use the anti static cleaning wipes to make sure your LCD surface is free from dust, grease dirt, or fingerprints. Then cut the film to the desired size using the handy trim guide printed on the back of the protection film.

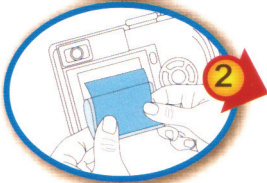

Step 2) Separate the protective paper from the top of the film exposing approx. 1/4" of the film.



 Step 3) Apply the exposed portion of the film to your LCD screen.

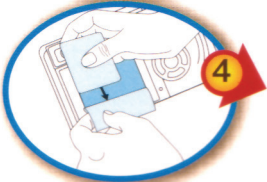

Step 4) Gently pull the backing off of the film while using the squeegee card to smooth the film on to your LCD.

One Year Unconditional Warranty

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.

www.promaster.com

Fairfield, CT

06825