



## SystemPRO LiteTent Folding Instructions

The PROMASTER SystemPRO LiteTent includes three color backgrounds attached with Velcro strips that are located in the back of the tent when the tent is open. The front panel is attached with Velcro strips and is used when you want to eliminate all reflections from an object being photographed, such as silverware or glass items. The camera lens is placed in the slit to photograph the product.

Folding the PROMASTER SystemPRO LiteTent is a relatively simple task:



1) Fold the sides down.



2) Hold the sides as shown and twist into a figure "8" while folding the circles towards each other.



3) Fold the two circles formed on top of each other.



4) Take the extra circle and place it on top.