

[pro]master®

Professional [White Balance Lens Cap]

The ProMaster White Balance Lens Cap helps you achieve accurate color balance in your images. It works by giving you a calibrated, white translucent cover to shoot through which allows you to customize your camera's color balance for even, white light.

To use the White Balance Lens Cap, begin by checking your camera's instruction manual to ensure that your camera is capable of custom white balance. Almost all DSLRs have this capability.



1. Place the White Balance Lens Cap on your camera
2. Put your camera into manual focus mode
3. Use automatic exposure or set your exposure yourself
4. Aim the camera towards your light source (for strobes, make sure to use bounce and point your camera towards a corner or the ceiling)
5. Set your camera's custom white balance. Each camera's custom white balance is done differently, you may have to refer to your camera's manual to complete this action
6. Take a photo according to your camera's instructions
7. Enjoy accurate lighting with perfect color

For your convenience, there is a pre-drilled hole in the White Balance Lens Cap for use with the ProMaster Universal Cap Leash #5079

KEEP IN TOUCH

For more information, tutorials, industry news and tips & tricks, make sure to visit us at promaster.com, follow our feeds on Twitter @promasterphoto, and subscribe to our YouTube Channel username ProMasterChannel.

ONE YEAR UNCONDITIONAL GUARANTEE

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster product are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.

www.promaster.com | Fairfield, CT 06825