



XtraPower PRO NiMH Rapid Charger Kit

For Rechargeable NiMH AA/AAA Batteries

Please read and follow all instructions before using this product.

IMPORTANT WARNING:

This device is for charging rechargeable **NiMH Batteries ONLY**. Inserting any other batteries may damage the device, destroy the batteries or cause injury to the user.

CAUTION:

- Always unplug the charger when it is not in use.
- Always unplug your charger from the power source before cleaning it.
- Do not use, place or store the charger where it may come into contact with water or moisture.
- Do not use under direct sunlight.
- Do not short-circuit the metal contacts on the battery or the charger.
- Do not disassemble, deform or reconstruct any part of the charger.

OPERATING INSTRUCTIONS:

1. To charge, flip up the AC plug on the back of the charger and plug it into a household AC outlet.
2. When inserting batteries into the charger, please follow the embossed diagram with the correct direction of polarity on each charging slot. To protect the user and batteries, the charger will NOT charge the batteries if they are placed into the charger with reversed polarity.
3. This charger is designed to charge two or four AA /AAA batteries of the **SAME SIZE, BRAND, and CAPACITY**. You may select whether you want to charge two or four batteries by setting the slide-switch at the center of the charge slot. The available options are shown below : **(see Figure 1)**

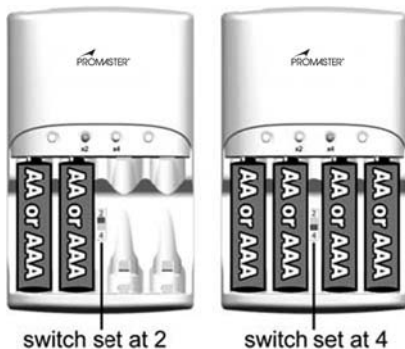 


Figure 1

- 3.1 Four AA batteries with the slide switch set to the symbol "4."
- 3.2 Four AAA batteries with the slide switch set to the symbol "4."
- 3.3 Two AA batteries in the two left battery slots with the slide switch set to the symbol "2."
- 3.4 Two AAA batteries in the two left battery slots with the slide switch set to the symbol "2."
4. The **RED LED** indicator will turn on when the batteries are inserted and will remain on until the batteries are removed.
5. Please remove the batteries after they are fully charged. While it is safe to leave batteries in the charger, do not leave batteries in the charger for extended periods of time.

IMPORTANT NOTES:

1. All batteries will naturally discharge themselves over time even if they are not in use. To prolong their service life, we recommend that you do not let a battery sit idle for more than two months without recharging. Be sure to recharge your batteries before you use them.
2. The batteries and charger will get warm during charging. This is normal.
3. Always insert the battery into the charger with the correct polarity.
4. Always keep metal contacts on both charger and battery clean by wiping the surfaces with a dry, soft and clean cloth.

5. Please be sure the pair of batteries to be charged together were used together and are the same brand, size and capacity rating. The charger may not work properly if you fail to follow this instruction.
6. Remove your batteries from the device (such as digital camera, music player or other portable electronic device) after use. These devices will continue to drain a small amount of current from your batteries even if the device is turned off.

TROUBLE SHOOTING:

If the RED LED indicator does NOT light up when the charger is plugged into a power source and the batteries have been inserted:

- * The battery may not be properly inserted. Unplug the charger from power source and check to make certain the batteries are seated properly.
- * Check and make sure metal contacts on both charger and battery are clean.

If the battery is providing a much shorter operating time after being fully charged:

- * The battery may have sat idle for too long a period of time.
- * The battery is worn out and about to reach the end of its service life. All rechargeable batteries will eventually wear out after being used for a certain number of cycles.

LIMITED WARRANTY:

This product carries a full one-year warranty from date of purchase against defects in materials and workmanship. This warranty does not cover damage resulting from accidents, misuse, unauthorized repair/alterations to the product or failure to follow operating instructions. If the product should become defective within warranty period and under the above-mentioned conditions, please return it to the store you originally purchased it with proof of purchase for repair or replacement free of charge.

Made in Taiwan



PHOTOGRAPHIC RESEARCH ORGANIZATION, INC.
FAIRFIELD, CT 06825

www.promaster.com

*PROMASTER is a supplier of premium quality lenses,
digital camera memory, batteries and accessories, binoculars, filters,
digital and conventional electronic flashes, camera cases and tripods.*