



# Infrared Sony Remote

Replaces Sony RMT-DSLR2 & RMT-DSLR1



## Identifying the Parts:

	S	Shutter button
	●/■	Start/Stop button
	2S	Shutter release in 2 seconds button
		Histogram button
	DISP	Display button
		Index button
		Rotate button
		Playback button
	MENU	Menu button
	PRINT	Print button
		Slide show button
	+/-	Scale up/down buttons
		Delete button
	▲▼◀▶ ENTER	Multi-selector

Notes:

- For the first time use, please pull out the plastic separator at the battery holder.

## Replacing the Battery:

1. With the remote control facing down slide the battery tray out of the bottom of the remote.



2. Remove the old battery and insert a new one by placing it into the insert in the battery tray. Make sure the side marked “ + ” is facing up. Now slide the tray into the remote so it locks into place.



## Using the remote with your camera:

1. Set your camera's DRIVE MODE to REMOTE CDR. Or locate REMOTE CTRL in your camera's menu and turn it ON. Refer to your camera's instruction manual for more specifics.
2. Press the S button on the remote to take a photograph.
3. Press the 2S button to take a photograph after a 2 second delay.
4. Press the Start/Stop button to begin or end a video recording.
5. Press the + or - button to zoom in or zoom out the lens. This function will only work with a Sony power zoom lens.

\* Note: not all buttons may work the same on all cameras. Functionality can vary by camera model.

## Using the remote with your television:

1. First connect your camera to your television or monitor using the proper cable. Refer to your camera's instruction manual for more specifics.
2. Many of the remote's buttons will look similar to and function the same as buttons on the back of your camera.
3. Press the DISP button to toggle through different display options on your camera.
4. Press the Playback button to review your images.
5. Press the Slide show button to start or stop a slide show. During a slide show you can:
  - Use the Left and Right arrow buttons to see the previous or next image
  - Use the Enter button to pause or resume playing the slide show
6. Use the Delete button followed by the Arrow buttons and Enter button to delete an image.

\* Note: not all buttons may work the same on all cameras. Functionality can vary by camera model.

## Using the remote with your pictbridge printer:

1. Connect your camera to a Pictbridge compatible printer. You may be able to connect to a printer simultaneously to connecting to a television or external monitor for easier viewing. Refer to your camera's instruction manual for more specifics.
2. Display the image you want to print on the camera's LCD display and/or on your television while connected.
3. Press the PRINT button on the remote.
4. For more details about printing, refer to your camera's instruction manual.

## Specifications:

Battery type:	1 x 3 V CR2025 lithium battery
Operating temperature:	32° - 104° F (0° - 40° C)
Operational range:	50' (15 m)
Dimensions:	3 1/2" x 1 5/8" x 7/16" (89 mm x 42 mm x 11 mm)
Weight:	.78 oz (22 g)
Replaces:	Sony RMT-DSLR1 & RMT-DSLR2

## One Year Unconditional Warranty

If for any reason, this ProMaster product fails within ONE YEAR of the date of purchase, return this product to your ProMaster dealer and it will be exchanged for you at no charge. ProMaster products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your ProMaster product fails under normal use, we invite you to return it to ProMaster for evaluation.