



Digital Multimedia Photo Frame
User Manual

Introduction

Congratulations on your purchase of a PROMASTER® Digital Multimedia Photo Frame.

Before operating the unit, please read this manual thoroughly and keep it for future reference.

The PROMASTER® Digital Multimedia Photo Frame enables you to view your digital pictures directly from your camera's memory card. You can also create a slide show with multiple transition effects without a computer, digital camera or internet connection.

Precautions and Maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose this appliance to moisture.
- To avoid over heating, do not block the ventilation holes on the back of the frame at any time.
- Keep your frame out of direct sunlight. Direct sunlight may cause damage to the display.
- Always use the eject button on the memory storage card slots to remove the memory storage cards.
- Do not dismantle the frame. There is a risk of electric shock, and there are no user serviceable parts inside. Dismantling your frame will void your warranty.
- Do not use or store your frame under conditions which could allow condensation to occur, or damage may result.

Operating Instructions

Inserting Memory Cards

Your PROMASTER® Digital Multimedia Photo Frame is compatible with the following memory cards:


- Secure Digital Card (SD)
- Multimedia Card (MMC)
- USB Host


With the screen of your frame facing you, insert the memory card into the card slot. Do not force the memory card into the slot. If you are not able to easily insert the memory card completely, you may have inserted it in a wrong way.

Side View

- DC (+12V): DC power adapter input
- SD/MMC card: Socket for SD/MMC memory cards
- USB Host: Socket for USB memory

Player Overview

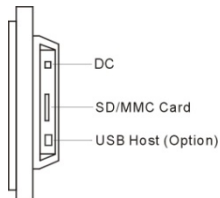

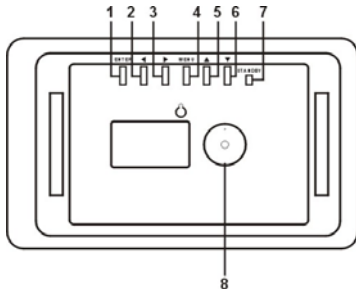

Controls and functions:

1. **ENTER BUTTON:** Confirms menu choices and activates pause or play.
2. **LEFT BUTTON(◀):** Move cursor left in menu function. Advance photo forward in play mode.
3. **RIGHT BUTTON (▶):** Move cursor right in menu function. Advance photo backward in play mode.
4. **MENU BUTTON:** Displays the menu functions.
5. **UP BUTTON(▲):** Move cursor up in menu function and rotates photos in the play mode.
6. **DOWN BUTTON(▼):** Move cursor down in menu function and displays clock calendar mode from the play mode.
7. **STANDBY BUTTON:** Turns the frame ON/OFF.
8. **Desk Bracket attachment point.**

Getting Started


Attach the frame desk bracket to the frame and adjust the bracket to the desired viewing angle. Insert DC power supply cord into the frame first, and then plug the power supply into a standard wall outlet.

Then the screen will display as below: (Plays stored pictures or if an SD/MMC card or USB storage device is attached, then it will play the pictures in the external memory.)

power adapter



socket

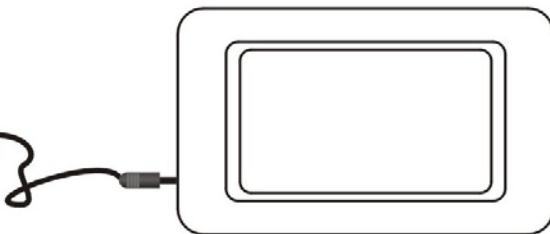


Menu Functions

The frame setup menus allow you to configure the Video and General settings of your frame.

1. Power on the frame, will show the PROMASTER® logo (Picture 1).
2. Insert the SD/MMC card or USB Host, then the frame will play the pictures from the card automatically.
3. Press the MENU BUTTON to enter the MENU (Picture 2).



Picture 1

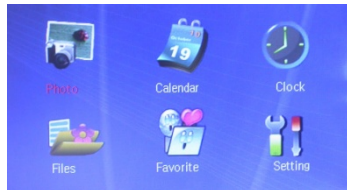

Picture 2

Use the UP/DOWN or LEFT/RIGHT buttons to navigate to the menu option you wish to choose. Pressing the ENTER button will select that menu. Pressing the menu button with return to the previous mode.

- Photo: Once this option is selected the first 6 photos on your card will be displayed. Press the UP/DOWN or LEFT/RIGHT buttons to navigate through your photos. Pressing the ENTER button will select the photo which is highlighted.
- Calendar and Clock: Use the LEFT/RIGHT buttons to navigate through the menus.
- Files: Use

the UP/DOWN or LEFT/RIGHT buttons to select the contents of the file you wish to see.

- Favorite: Press LEFT/RIGHT button to select, then press UP/DOWN key to select the memory format or see the contents of the memory.
- Setting: Pressing the LEFT/RIGHT button will select the sub menu.
 - a) Picture mode: Press ENTER to select, press LEFT/RIGHT to select the picture playback mode.
 - b) Pictures Speed: Press ENTER to select, press LEFT/RIGHT to select the picture playback speed.
 - c) Brightness: Press ENTER to select. Press LEFT/RIGHT to set the brightness of the screen.
 - d) Language: Press ENTER to select. The default language is English. Press LEFT/RIGHT to change the selected language.
 - e) Date Time: Press ENTER to select and set the current year, month, day, hour, minute and second.

Specifications

Display: 7" TFT LCD 480*3(RGB)*234

Power: AC Adapter, Input 100-240V AC, Output 12V 500mA

Environmental operating ranges

Operation: 32-95 F, Humidity 0 - 85

Storage: -4 -140 F, Humidity 10 - 90



PHOTOGRAPHIC RESEARCH ORGANIZATION, INC.
FAIRFIELD, CT 06825

www.promaster.com

*PROMASTER is a supplier of premium quality lenses,
digital camera memory, batteries and accessories, binoculars, filters,
digital and conventional electronic flashes, camera cases and tripods.*