

[pro]master°


[Shoulder Support]

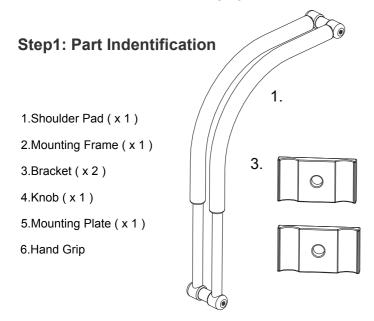


Assembly Guide

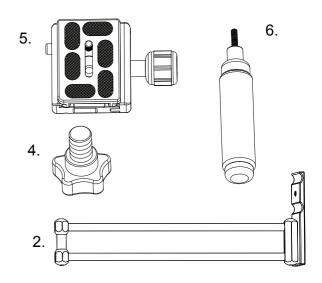

Step 2

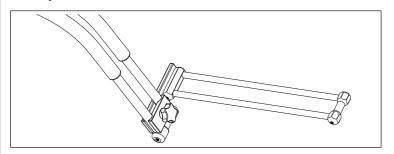


Knob (# 4) through the bracket (# 3) into the should pad (# 1).

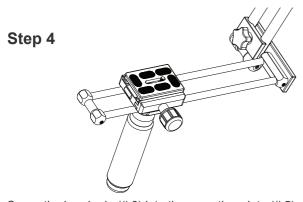

Screw the hand grip (# 6) into the mounting plate (# 5)

Step 3

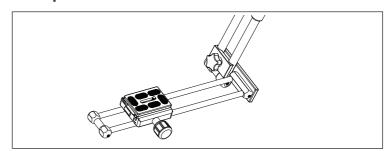

Align the mounting frame (# 2) to the grooves on the mounting plate (# 5).